

SOFTWARE DOWNLOAD PROCESS FOR Original R4 Version 2 CARD

Note: The original R4 Version 2 Card can only support up to 2G memory card, it can not support SDHC memory card, or any memory card over 2G

Step 1 – Left click on the software box. A **file download** window will appear.

Step 2 – Left click save. A **save as** window should appear.

Step 3 – Ensure **save in** location that reads **Desktop**. Left click **save**, A download window should now appear with the download progress on show.

Step 4 – When download is complete left click **open**. Now you should have a window that reads **R4_Version_2_V1.18**

Step 5 – On the left hand side there should be a box that reads **folder tasks**. Left click **extract all files** and follow **extraction wizard** instructions – Next – Next – Finish. A second **R4_Version_2_V1.18** window will now appear. **If you have Windows “VISTA” right clicks on downloaded folder on desktop and choose extract all and go straight to step 7.**

Step 6 – Close down the partially hidden **R4_Version_2_V1.18** window leaving extracted window open.

Step 7 - Insert the micro SD card into card reader and insert the card reader into the USB port in your computer. A **removable disk** window will show on the screen. You should now have 2 windows open; ensure that you keep both of the windows open.

Step 8 – left click start, left click my computer, now right click the icon that reads **removable disk** on the drop down menu please click on **format**.

Step 9 – Please ensure that the file system is set to **FAT 32**. Left click and select **quick format** once you have selected this click start, a warning window should appear that will read that a format will erase all the data on the card, **click ok**, once format is complete click ok and close **format** window.

Step 10 – Right click **removable disk** icon and select **open** from the drop down menu. You should now have 2 windows open **one blank** and one with the **r4i software** in it.

Step 11 – Select **software** folder, **there should be six files in this window**.

Step 12 – Left click and hold on **one** of the 4 files and drag across into the blank window. This will have to be repeated with the other remaining files.

Please Note: After uploading the V1.18 software, you should see 2 single files and 2 folders in the root of your memory card as the following picture.

Name	Date modified	Type	Size
📁 _system_	15/07/2008 22:45	File Folder	
📁 moonshl	15/07/2008 22:45	File Folder	
📄 _DS_MENU.DAT	24/04/2008 17:03	DAT File	1,377 KB
📄 _DS_MSHL.NDS	18/07/2007 15:41	NDS File	487 KB

Step 13 – Remove the USB reader and window will close. Close down remaining window.

You have now successfully downloaded the software for your R4 for use with a Nintendo DS.

Step 14 - remove the Micro SD from the USB card reader and place Micro SD card into R4. Insert R4 into the DS and switch on, the DS will now be ready for use.

Please Note:

When wishing to place any type of entertainment file on your **R4 Version 2**, please follow these two steps.

Step 1 – Insert Micro SD back into the USB card reader and place into the USB port of the computer, a **removable disk** window will appear.

Step 2 – Drag and drop any entertainment file that you require for your **R4i** card into the **blank area** of the **removable disk window**.

Please note that **nothing** is to be placed inside any of the software files on view in the **removable disk window**.

Repeat **step 14** and enjoy.